

W02

Mobile Telephone

owner's handbook



Thank you for purchasing the Yak W02 mobile telephone. With the W02 mobile telephone you will experience a new sense of freedom and independence, always secure in the knowledge that help is only a button-press away.

The Yak W02 mobile telephone is a precision electronic instrument, and as such should be used and maintained with care. To get the most out of your mobile telephone, please read this manual in its entirety before attempting to use the device.

NOTE: In order to get the longest possible life out of your rechargeable battery, we recommend that you allow it to charge for eight full hours before first using the telephone. This full initial charge will condition the battery to accept a full charge every time it is recharged in the future, and will ensure years of trouble-free use.

We are constantly striving to improve our products to better serve you, our customer. Because of this ongoing improvement process, you may find that some icons or depictions in this manual are slightly different to those on your telephone handset. We apologise for this discrepancy, but trust you will nevertheless be able to understand the instructions with little effort.

SAFETY INSTRUCTIONS	5
Pay attention to traffic safety	5
Pacemaker interference	5
Switch off in medical facilities	6
Switch off on aeroplanes	6
Accessories and batteries	6
Switch off near explosives	7
Use the telephone correctly	7
Your telephone is not waterproof	7
GETTING STARTED	8
Installing the SIM card and battery	8
Charging the battery	12
Battery charge level indicator	13
Low battery alert	13
YOUR TELEPHONE	14
Key functions	16
Display icons	17
MAKING AND RECEIVING CALLS	18
To make a call	18
To answer a call	18
Call waiting	18
To end a call	18

To reject a call	19
To re-dial a number	19
PHONEBOOK	20
Selecting where new contacts are stored	20
Adding a new contact to the phonebook	20
Searching for an existing contact	21
Deleting an existing contact	21
Setting up speed-dials	21
TEXT MESSAGING	22
Writing and sending a text message	22
Receiving a text message	22
SOS EMERGENCY BUTTON	23
Creating an emergency message	24
Adding, deleting & updating emergency contacts	24
TORCH & RADIO	25
Torch operation	25
Radio operation	25
Switching the radio on	25
Scanning for stations	25
APPENDIX	26

SAFETY INSTRUCTIONS

Please read the safety instructions carefully. It may be dangerous or illegal to use your mobile telephone contrary to these instructions.

Remember to follow any special regulations in force in your area, and always switch the telephone off in situations where it is prohibited by law or where it might cause interference or danger.



Pay attention to traffic safety

Obey local laws and do not use the telephone whilst driving. Using a mobile telephone whilst operating a motor vehicle is dangerous, and is illegal in all states of Australia. Radio frequency signals from a mobile telephone in use may affect improperly installed or inadequately shielded electronic systems in motor vehicles, such as electronic fuel injection systems (EFI), electronic anti-lock braking systems (ABS), electronic speed control systems (cruise control) and air bag systems (SRS).



Pacemaker interference

Pacemaker manufacturers recommend that a minimum separation of 15 centimetres (6 inches) be maintained between a wireless communications device and a pacemaker in order to avoid potential interference with the pacemaker's operation.



Switch off in medical facilities

Hospitals and health care facilities may be using devices which are sensitive to external radio-frequency energy. When inside a hospital or medical facility, obey any signposted warning notices and switch your mobile telephone off.



Switch off on aeroplanes

Using your mobile telephone in an aircraft whilst flying is against the law. Using your mobile telephone on an aeroplane may interfere with the aircraft's control system and disrupt the pilots' ability to communicate with air control towers. Please switch your telephone off before boarding an aircraft.



Accessories and batteries

Use only approved accessories and batteries. Use of accessories or batteries not specifically designed for this telephone may shorten the life span of the telephone or cause irreparable damage. Please ensure the telephone has been switched off before removing or replacing the battery, or installing or removing a SIM card or Media card. Dispose of discarded batteries properly according to local government regulations.



Switch off near explosives

Potentially explosive environments include areas where you would normally be advised to switch your vehicle engine off, such as petrol stations. Sparks in such areas could cause an explosion or fire resulting in physical injury or even death. Observe restrictions governing the use of communications equipment in areas such as petrol stations, chemical storage facilities and blast sites.



Use the telephone correctly

Please use the telephone according to the operating instructions given in this manual. Do not let young children use the telephone without supervision; it is not a toy. Your telephone contains small parts which can be accidentally swallowed by a child and cause internal injury.



Your telephone is not waterproof


The telephone is not waterproof. Please do not expose the telephone to rain or snow, nor allow it to be exposed to nor immersed in any liquid.

GETTING STARTED


Installing the SIM card and battery

Always switch the telephone off and disconnect it from the charger before inserting or removing the battery. SIM cards are easily damaged by scratches or bending, so please use care when handling, inserting or removing the card.


1. Open the battery cover by lightly pressing on the back of the telephone and sliding the cover panel down.

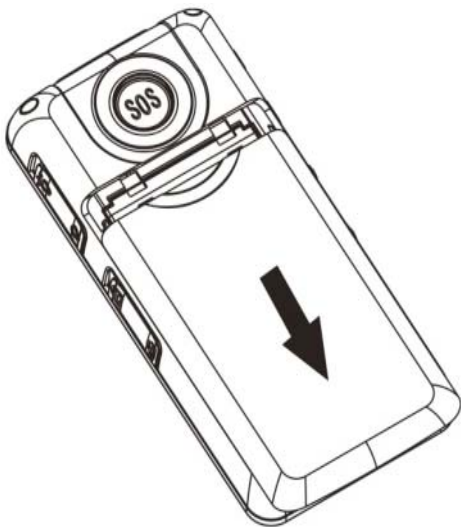


2. Install the SIM card by sliding it into its nest and under the metal holding plate (to remove the SIM card, gently press on it and slide it out of its nest).

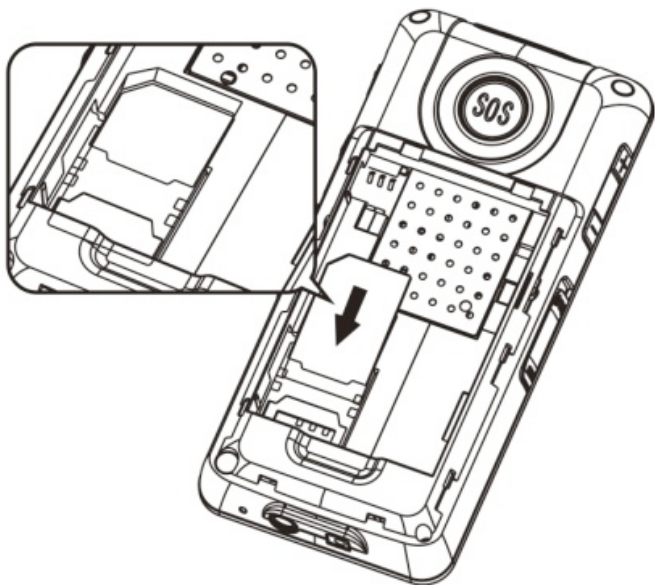


3. Install the battery into the battery slot, making sure that the three metal stripes on the battery align with the three metal prongs in the battery slot.

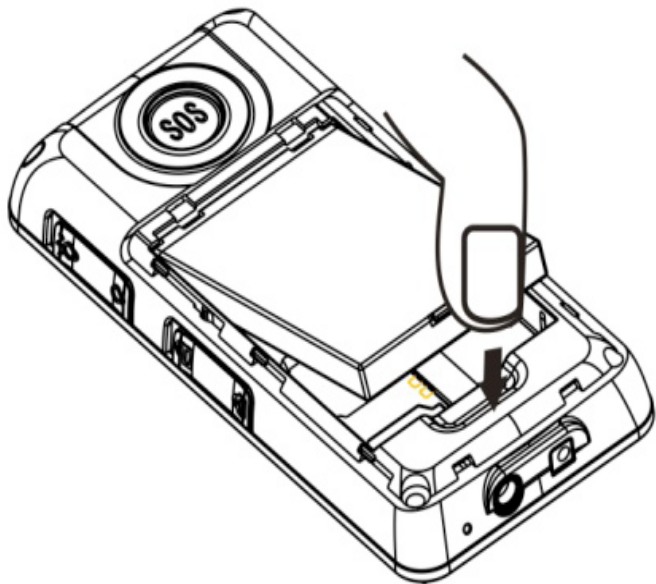

- Put the battery cover back on the telephone. Make sure the cover is slid completely to its locked position. You will hear and feel a light “click” when the cover is slid to the locked position.

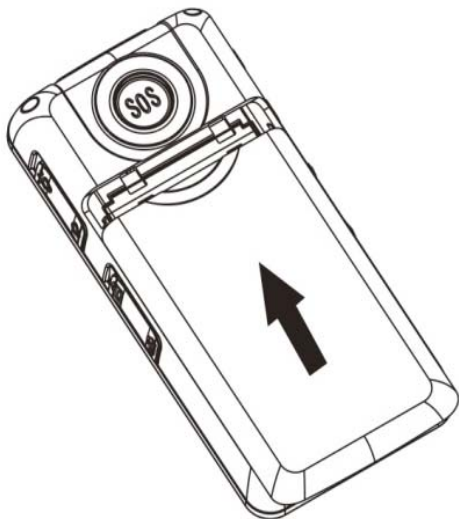

- To switch the telephone on, press and hold the  key until the screen lights up. To switch the telephone off, press and hold the same key until the display powers off.


Charging the battery

The battery can be charged with the telephone switched on or off. Please make sure that the battery is in the telephone before attempting to charge it.

Connect the charger to its port on the bottom panel of the telephone, then plug it into a standard 240 volt power point. To disconnect, first unplug the charger from the power point, then disconnect it from the telephone.



Battery charge level indicator

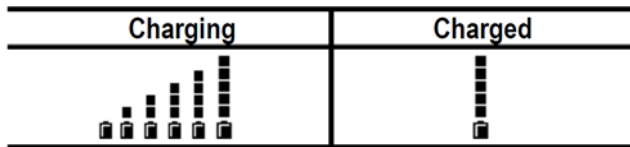



Low battery alert

The telephone will sound an alert and display a low battery warning on the screen, when the battery is low and needs to be re-charged.


YOUR TELEPHONE

Your telephone is in stand-by mode when it is switched on but no operation has been selected.

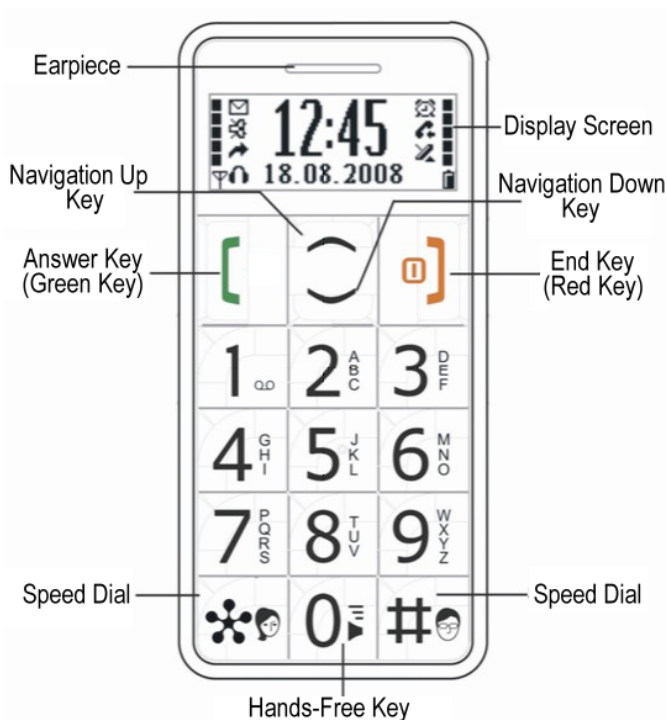

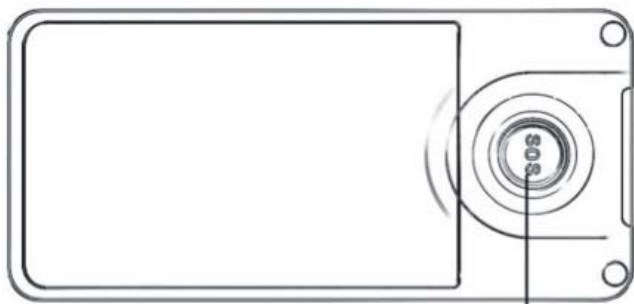


SOS Button

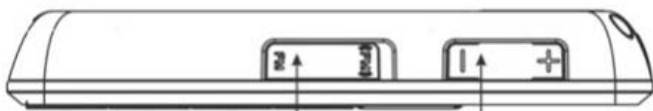

Radio Switch

 Volume Control

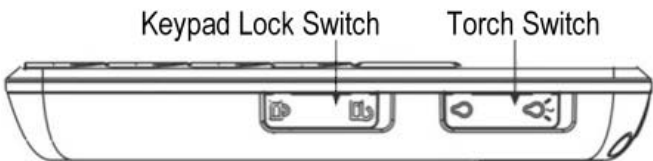

Keypad Lock Switch


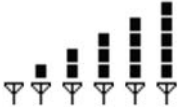 












Torch Switch

Key functions

Answer Key (Green Key)	Calls: Press to make an outgoing call or press to answer an incoming call. Standby: Press to enter call register. Operating: Press to confirm the desired function.
End Key (Red Key)	Standby: Press and hold to switch phone on or off. Operating: Press to cancel last command.
Navigation Up Key	Standby: Press to enter Main Menu. Operating: Press to scroll up.
Navigation Down Key	Standby: Press to enter Phonebook. Operating: Press to scroll down.
# Key	Standby: Press and hold to call preset number or press once to enter a “#” symbol. Editing: Press to switch typing method.
* Key	Standby: Press and hold to call preset number or press once to enter a “*” symbol, twice to enter a “+” symbol or thrice to enter a “P” (pause) symbol. Editing: Press to access punctuation symbols.
Hands-Free Key	Press to switch hands-free speaker on or off.
Volume Control	Press “+” to increase or “-” to decrease the sound level for telephone calls and radio.
Radio Switch	Switch to ((FM)) position to switch radio on, or FM position to switch radio off.
Torch Switch	Switches the torch on or off.
Keypad Lock Switch	Locks and unlocks the keypad.
SOS Button	Press and hold to start emergency call.

Display icons

The following icons may be displayed on the screen:

	Battery status
	Network signal status
	Alarm
	Unread message
	Message memory full
	Call transfer (Forward)
	Missed call
	Silent mode
	Roaming
	Headset is connected
	Keypad locked
	Unread message (keypad locked)
	Missed call (keypad locked)
	Unread message and missed call (keypad locked)

MAKING AND RECEIVING CALLS

To make a call:

Enter a number and press the Green Key.

To delete a digit whilst entering a number, press the Red Key.

Press and hold the Red Key to clear the screen.

To answer a call:

Press the Green Key to answer an incoming call.

Call waiting:

(Only applicable if you have Call Waiting activated with your network provider)

To answer a new incoming call, press the Green Key. You will be connected to the new caller and your current call will be put on hold. Once you've completed the second call, press the Red Key to disconnect the second call and return to the first caller.

To end a call:

Press the Red Key.

To reject a call:

Press the Red Key to reject an incoming call (the caller will hear a busy signal or will be redirected to your voicemail service, depending on your network settings).

To re-dial a number:

From the standby mode, press the Green Key to bring up your call list. Scroll (use the Navigation Up or Navigation Down keys) to "Dialled Calls" then press the Green Key again. Scroll to the number you wish to call then press the Green Key twice to re-dial.

Making international calls:

Press the ★ Key twice to see a "+" symbol. Enter the country code, area code and telephone number, then press the Green Key.

To enter a "P" symbol ("pause") if required, press the ★ Key three times.

PHONEBOOK

Telephone numbers can be telephone memory or directly on the SIM card. The telephone will display contacts from both the telephone memory and the SIM card, and will by default store new contacts to the telephone memory.

Selecting where new contacts are stored

From standby, press the Navigation Up Key three times to reach the “Phonebook” option, then press the Green Key. Press the Navigation Up Key twice to select “Preferred storage” then press the Green Key.

Use the Navigation Up Key or Navigation Down Key to select which memory you’d prefer to store your new contacts to, then press the Green Key to save your selection.

Adding a new contact to the phonebook

Press the Navigation Up Key three times to reach the “Phonebook” option, then press the Green Key. Press the Navigation Down Key twice to select “Add new contact” then press the Green Key. Enter the name of your contact then press the Green Key. Press the Navigation Down Key to select “Number” then press the Green Key. Enter the telephone number of your contact then press the Green Key. Additional details (Home Number, Email Address, Office Number, Associated Sound and Caller Group) can be set by using the Navigation Down Key.

Searching for an existing contact

From standby, press the Navigation Up Key three times to reach the “Phonebook” option, then press the Green Key. Press the Navigation Down Key once to select “Search entry” then press the Green Key. Enter the contact’s name and press the Green Key.

Alternatively, from standby, press the Navigation Down Key once to display the Contact List. Then use the Navigation Up Key and Navigation Down Key to scroll through the list until you reach the desired contact.

Deleting an existing contact

Find the contact you wish to delete using the above methods, then press the Green Key once. Use the Navigation Up Key to select “Delete.” Press the Green Key to delete, then again to confirm.

Setting up speed-dials

Up to 10 speed-dial numbers can be set up for buttons “2” to “9,” “*” and “#.”

To enter, edit or delete a speed dial, press and hold a key which has no associated speed dial defined. Use the Navigation Up Key or Navigation Down Key to find the speed dial you wish to change, then select the appropriate option - “Edit” or “Delete.”

Alternatively, use the “Call setup” option in the “Settings” menu to access and modify your speed dials (consult the menu layout in the appendix).

TEXT MESSAGING

Writing and sending a text message

From standby, press the Navigation Up Key once to select “Messages,” then press the Green Key. Press the Green Key again when “Write Message” is displayed.

Enter your message, then press the Green Key to complete typing. Select from the options if you wish to insert a telephone number from the phonebook or if you’d like to use a message template. Select “Done” when ready to send. Select “Send Only” if you just wish to send your message, or choose one of the other available options to save and send, save only or send to multiple recipients.

Type the telephone number of the person you wish to send the message to, then press the Green Key. If the person is in your phonebook, press the Green Key without entering a number, then scroll through the contact list to choose the recipient.

Receiving a text message

When you receive a text message, the telephone will display an “unread message” symbol. Press the Navigation Up Key to select the “Messages” menu, then press the Navigation Down Key to select “Inbox.” You can use the Navigation Down Key to scroll through all received messages.

SOS EMERGENCY BUTTON

IMPORTANT NOTICE: WIRELESS TELEPHONES, INCLUDING THE W02, OPERATE USING RADIO SIGNALS, WIRELESS NETWORKS, LANDLINE NETWORKS AND USER-PROGRAMMED FUNCTIONS. BECAUSE OF THIS, CONNECTION IN ALL LOCATIONS AND/OR CONDITIONS CAN NOT BE GUARANTEED. YOU SHOULD NEVER RELY SOLELY ON ANY WIRELESS DEVICE FOR MEDICAL EMERGENCY COMMUNICATION.

Your telephone can send emergency message notifications and initiate emergency telephone calls to up to 4 people, at a single press of the SOS Button.

In an emergency situation, press and hold the SOS Button for three seconds. The following will happen;

1. The telephone will emit a loud siren sound, designed to attract the attention of passers-by and alert them to the fact that you are in need of assistance,
2. The pre-programmed text message will be sent to all emergency contacts (up to 4) in your telephone,
3. The telephone will start dialling each of the emergency contacts in turn until someone answers, and
4. The telephone will automatically switch to “hands-free” mode so that you can communicate with the other party without having to hold the telephone against your ear.

Follow the instructions below to configure the emergency function.

Creating an emergency message

Press the Navigation Up Key to select “Messages,” then use the Navigation Up Key or Navigation Down Key to find “Emergency SMS.” Write your emergency message (for example, “I am in trouble, please help me”) as you would any other message, then save it. This is the message which will be sent to emergency contacts when the SOS Button is pressed.

Adding, deleting & updating emergency contacts

From standby, press the Navigation Up Key three times to reach the Phonebook. Press the Green Key once, then use the Navigation Up Key or Navigation Down Key to reach “SOS Number.” Select “Add,” “Update” or “Delete” for each of the 4 storage locations and enter the contact telephone number of each emergency contact as required.

Numbers entered here are not taken from the phonebook, so please double-check that they are entered correctly. It is strongly advised that you enter the telephone numbers of friends and relatives living nearby, as they will be in the best position to render assistance should the need arise.

TORCH & RADIO

Torch operation

The torch is operable at all times when the telephone is switched on, irrespective of the Keypad Lock switch.

Slide to torch switch up to activate the torch. Slide the torch switch down to switch it off.

Radio operation

The built-in FM radio is operable at all times that the telephone is switched on, except when the Keypad Lock switch is activated. The radio is functional with or without a headset being plugged into the telephone; however, reception will be greatly improved when a headset is plugged in as its cable will be used as an additional antenna.

Switching the radio on

Slide the Radio Switch to the ((FM)) position. The display will change to radio mode.

Scanning for stations

Press the ★ Key to scan for available radio stations. Once a station is found, the scan will stop and you will hear the station's broadcast.

APPENDIX

Menu layout

MESSAGES

- Write message
- Inbox
- Outbox
- Drafts
- Templates
- Emergency SMS
- Message settings
 - Profile settings
 - MSC no
 - Validity
 - Type
 - Memory status
- Voice mail
 - Voice mail number
 - Connect to voice mail
- Broadcast message
 - Receive mode
 - Channels

CALL LOGS

- Dialled calls
- Received calls
- Missed calls
- Call timers
 - Last call
 - Dialled calls
 - Received calls
 - Reset timers
- Clear log
 - Missed calls
 - Dialled calls
 - Received calls
 - Clear all

SETTINGS

- Multimedia

 - Audio player

- File manager

- Silent mode

 - Off

 - On

- Phone setup

 - User profiles

 - General

 - Activate

 - Customise

 - Tone setup

 - Incoming call

 - Ring 1, 2, 3, 4, 5

 - MIDI 1, 2, 3, 4, 5, 6

 - Alarm

 - Ring 1, 2, 3, 4, 5

 - MIDI 1, 2, 3, 4, 5, 6

 - Message tone

 - Silent

 - Tone 1, 2, 3, 4, 5

 - Power on

 - Silent

 - Tone 1, 2, 3, 4, 5, 6

 - Power off

 - Silent

 - Tone 1, 2, 3, 4, 5, 6

 - Keypad tone

 - Human voice tone

 - Silent

 - Click

 - Tone

 - Volume

 - Ring tone

 - Key tone

 - Alert type

 - Vibrate and ring

 - Vibrate then ring

 - Light only

 - Ring

 - Vibrate only

 - Ring type

 - Repeat

 - Ascending

 - Single

 - Extra tone

 - Warning

 - Error

 - Camp on

 - Connect

SETTINGS *(continued)*

Answer mode

Any key

Meeting

Activate

Customise

(refer to "Customise" in "General" profile)

Outdoor

Activate

Customise

(refer to "Customise" in "General" profile)

Indoor

Activate

Customise

(refer to "Customise" in "General" profile)

Headset

Activate

Customise

(refer to "Customise" in "General" profile)

Key sound

On

Off

Volume time

On

Off

Time and date

Set home city

Set time/date

Time

Date

Set format

Time format

Date format

Language

English, Italian, Russian, Spanish, German, French, Portuguese,
Arabic, Turkish

Input method

Multitap ABC, abc

Numeric

Multitap FR, fr, DE, de, IT, it, RU, ru, TR, tr, PT, pt, ES, es, Arabic

Brightness

Network setup

Network selection

Preferred network

Call setup

Caller ID

Set by network

Hide ID

Send ID

SETTINGS *(continued)*

- Call waiting
 - Activate
 - Deactivate
 - Query Status
- Call divert
 - All voice calls
 - Activate
 - Number
 - Deactivate
 - Query Status
 - If unreachable
 - Activate
 - Number
 - Deactivate
 - Query Status
 - If no answer
 - Activate
 - Number
 - Deactivate
 - Query Status
 - If busy
 - Activate
 - Number
 - Deactivate
 - Query Status
 - All data calls
 - Cancel all diverts
- Call barring
 - Outgoing calls
 - All calls
 - Activate
 - Deactivate
 - Query status
 - International calls
 - Activate
 - Deactivate
 - Query status
 - International except
 - Activate
 - Deactivate
 - Query status
 - Incoming calls
 - All calls
 - Activate
 - Deactivate
 - Query status
 - When roaming
 - Activate
 - Deactivate
 - Query status

SETTINGS *(continued)*

Cancel all

Change password

Line switching

Call time reminder

Auto redial

Closed user group

IP number

Speed dial

Black list

Auto hands free

Security setup

SIM lock

Off

On

Phone lock

Off

On

Auto keypad lock

None

5 sec

30 sec

1 min

5 min

Fixed dial

Mode

Off

On

Fixed dial list

Barred dial

Change password

PIN

PIN2

Phone lock

To do list

Alarm

Alarm 1

Alarm 2

Alarm 3

Calculator

Restore factory settings

PHONEBOOK

Contact list

Search entry

Add new contact

Name

Number

Home number

Email address

Office number

Associate sound

None

Ring 1, 2, 3, 4, 5

MIDI 1, 2, 3, 4, 5, 6

Caller group

None

Friends

Family

VIP

Business

Others

Delete all

From SIM

From phone

Copy all

From SIM

From phone

SOS number

Add

Num1

Num2

Num3

Num4

Update

Num1

Num2

Num3

Num4

Delete

Num1

Num2

Num3

Num4

Status

On

Off

Preferred storage

Phone

SIM

Memory status

www.yak.net.au

PO Box 666
Liverpool NSW 1871